

Quick Guide for Successful Superior Mark® Testing

Standard Test



Identify a problematic area within the facility and photograph the existing marking.



Remove part of the existing marking to replace with the Superior Mark® tape.



Before placing the new tape, clean the area according to the ***“Superior Mark® Recommended Installation Steps”***.



Install the Superior Mark® sample where the old marking used to be and take a photo.



Test the Superior Mark® sample for a period of time in accordance to the area’s workflow.




Take a final photo of the results and send all 3 photos to the project’s representative.

Quick Guide for Successful Superior Mark® Testing

Accelerated Test




This accelerated test requires another material for comparison, which should be 1.5 m of your existing marking material placed 1 m away from the Superior Mark® sample, in parallel.

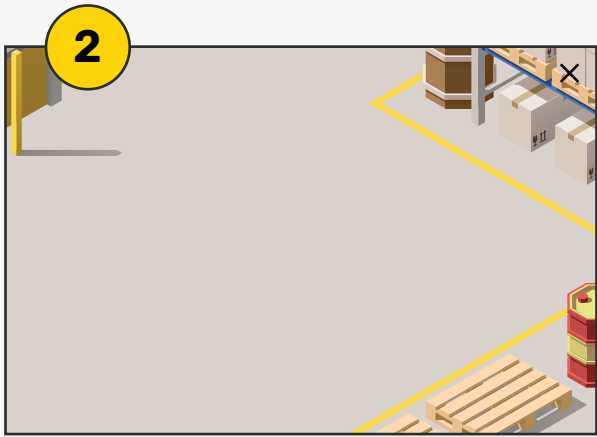

Find a clear area within the facility to conduct the accelerated test.




Before installing the Superior Mark® sample, clean the area according to the ***“Superior Mark® Recommended Installation Steps”***.

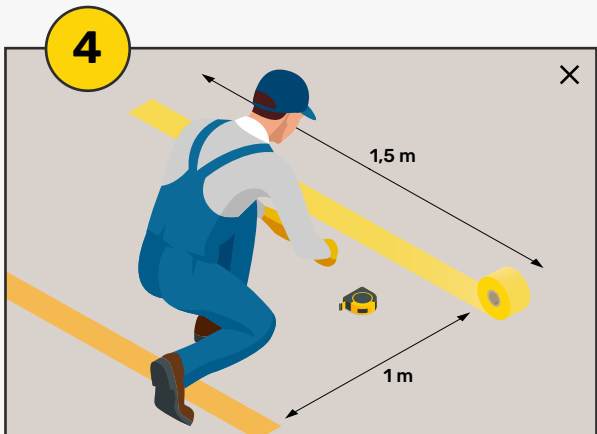

Install the Superior Mark® sample and the traditional marking 1 m away from one another, and take a photo.



Test both materials by running a process representative of the area, intensively.

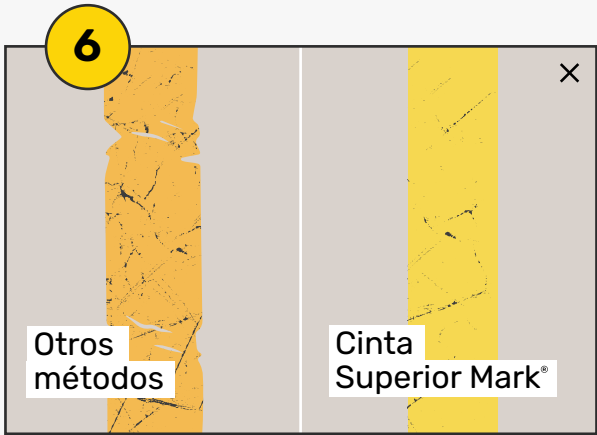

Take a final photograph of the results and send both before and after photographs to the project’s representative.